







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Vol+ TV		Vol+
	TV/VCR		Smart / List
	0		0
	AV		AV / Input / RDS
	Vol- TV		Vol-
	Backward		<< / Tune-

**Originalfernbedienung Ersatzfernbedienung**

	Forward		>> / Tune+
	Skip I<<		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display / CLK/CNT		Display / Media
	Up/+ PR/TRK		CH+ / Page+
	Up/+ PR/TRK		Up
	i/Setup		Setup / OPT /
	Left		Left
	OK/Enter		OK
	Right		Right
	Disc Menu		D.Menu / Top
	Down/- PR/TRK		CH- / Page-
	Down/- PR/TRK		Down
	Return		Back / Return









 











 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power VCR		Power
	Eject VCR		Eject / Surround
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	Vol+ TV		Vol+
	0 VCR		0
	Vol- TV		Vol-
	<< Backward		<< / Tune-
	>> Forward		>> / Tune+
	Pause/Step VCR		Pause / Step / Freeze

**Originalfernbedienung    Ersatzfernbedienung**

	Play VCR		Play / Slow
	Stop VCR		Stop / Hold
	Display VCR		Display / Media
	i/Setup VCR		Setup / OPT /
	O)/Audio VCR		Audio / Lang I/II
	Rec/ITR		Rec / Rec Mode
	Search VCR		Red / Netflix / Search
	Clear VCR		Exit / Cancel / Clear
	Repeat VCR		Green / APP / Repeat
	A-B/LP VCR		Yellow / YouTube / Repeat
	Random/CM Skip		Blue / Prime Video / Random



