





 

 



 



 



 











 







 





Originalfernbedienung Ersatzfernbedienung

 



 

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/Radio /
	Radio		Display / Media
	Audio		Audio / Lang I/II
	Info		Info / Angle
	Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	[...]		Subtitle / EQ
	Up		Up
	OK		OK
	Down		Down
	Right		Right
	Left		Left
	V+		Vol+
	V-		Vol-
	Menu		Menu / Home
	Quitter		Exit / Cancel / Clear
	P+		CH+ / Page+
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[=]		Text / Goto



Originalfernbedienung Ersatzfernbedienung

	♥		Fav / Marker / PC
	Back		Back / Return
	><		Picture / Format

Originalfernbedienung Ersatzfernbedienung

