



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	Top Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Menu		Shift + Menu /
	Home Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	<</<II/<I		<< / Tune-
	Play		Play / Slow
	>>/II>/I>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Play Mode		Guide / EPG / -/-
	Surround		Shift + Eject / Surround



