 

 

 

 

 

 

 

 

 

 

 

 



 





 


 

 




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	OSD		Display / Media
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/-
	Time		Sleep / Timer
	Setup		Setup / OPT /
	Title		Sound / Title

**Originalfernbedienung Ersatzfernbedienung**

	Zoom		Zoom / Size
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	HDMI		Shift + 0





Originalfernbedienung    Ersatzfernbedienung

	DVD/USB	+  Shift + 2
	Subtitle	Subtitle / EQ
	Angle	Info / Angle
	PBC	Fav / Marker / PC
	Return	Back / Return
	Language	Audio / Lang I/II
	A-B	Yellow / YouTube / Repeat
	Slow	+  Shift + Play /
	Repeat	Green / APP / Repeat
	L/R	Picture / Format
	Video	+  Shift + 4
	Prog	TV/Radio /
	N/P	Red / Netflix / Search

Originalfernbedienung    Ersatzfernbedienung