 

 

 






 


 



 



 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Timer On/Off		Sleep / Timer
	Mute		Mute / Dimmer
	Sound Mode		Sound / Title
	Disc Skip		Picture / Format
	Program/Set		Menu / Home
	Aux		AV / Input / RDS
	Deck 1/2		TV/Radio /
	CD/Repeat		3
	Mono/St		Fav / Marker / PC
	Tuner/Band		6
	<< Tape		<< / Tune-
	>> Tape		>> / Tune+
	Stop Tape		Shift + Stop /
	<> Tape		5
	Stop CD		Stop / Hold
	Play/Pause CD		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Up/CD >>I		Up
	Down/CDI <<		Down
	Tuning Mode		OK

