



Originalfernbedienung Ersatzfernbedienung








 
 











	POWER		Power
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/RADIO		TV/Radio /
	0		0
	<-PR		Back / Return
	MENU		Menu / Home
	INFO		Info / Angle
	PAGE+ / Zoom		Shift + CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	PAGE+ / Zoom		Zoom / Size
	EXIT		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-
	PAGE-		Shift + CH- /
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Left / VOL-		Vol-
	Left / VOL-		Left
	OK / List		OK
	Right / VOL+		Vol+
	Right / VOL+		Right
	FAV		Fav / Marker / PC
	Down / PR-		CH- / Page-
	Down / PR-		Down
	Pause		Pause / Step / Freeze
	Func / SAT		Display / Media
	SAT		Smart / List





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TV/AV		AV / Input / RDS				
	UHF		Shift + Power				
	Func		Setup / OPT /				
	Red / Audio		Red / Netflix / Search				
	Red / Audio		Audio / Lang I/II				
	Green / Position		Green / APP / Repeat				
	Yellow / Subtitle		Yellow / YouTube / Repeat				
	Yellow / Subtitle		Subtitle / EQ				
	BLUE / SOUND L/R		Blue / Prime Video / Random				
	BLUE / SOUND L/R		Sound / Title				

