

 













 





 


























 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		Info / Angle
	Sources		AV / Input / RDS
	Up		Up
	Search		Shift + Red / Netflix /
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	←		Back / Return
	Home		Menu / Home
	=		Setup / OPT /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Netflix		Smart / List
	Windows		Display / Media
	Rakuten Tv		TV/Radio /
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Exit/TV		Exit / Cancel / Clear
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



