
 


 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Audio Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Super Bass		Audio / Lang I/II
	Source Direct		AV / Input / RDS
	Bass+		Up
	Bass-		Down
	Treble+		CH+ / Page+
	Treble-		CH- / Page-
	Balance L		Left
	Balance R		Right
	Tuner Preset Up		Shift + >> / Preset+
	Tuner Preset		Shift + << / Preset-
	AUX		Shift + 7
	Tuner		Shift + 6

Originalfernbedienung Ersatzfernbedienung

	CD		Shift + 3
	Tape		Shift + 5
	DAT		Shift + 2
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0
	+10 CD		Guide / EPG / -/-
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold



