



 







 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	OPT+		Setup / OPT /
	Guide		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Menu		Menu / Home
	i		Info / Angle
	Audio?		Audio / Lang I/II
	Text		Text / Goto





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[...]		Subtitle / EQ				
	Mute		Mute / Dimmer				
	Wide		Picture / Format				
	V-Format		D.Menu / Top				
	Sleep		Sleep / Timer				

