 
 



 

 



 

 

 

 

 

 
 

 



 



 


 


 



 


 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	CD 1		Shift + 1
	CD 2		Shift + 2
	CD 3		Shift + 3
	Eject CD 1		Shift + 4
	Eject CD 2		Shift + 5
	Eject CD 3		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	10		Guide / EPG / -/-
	+10		Fav / Marker / PC
	Auto Preset		Setup / OPT /
	Repeat		Green / APP / Repeat
	Program		Shift + TV/Radio / Program
	Random		Blue / Prime Video / Random
	Continue		Picture / Format
	AUX		Shift + 7
	FM/AM		TV/Radio /
	CD Play/Pause		Play / Slow
	I<<		I<< / Preset-
	Stop/Clear		Stop / Hold
	>>I		>>I / Preset+
	Clock		Zoom / Size
	Timer		Shift + Sleep / Timer
	Stereo/Auto/Mono		Info / Angle
	Display		Display / Media



