














 

 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	TV		TV/Radio /
	*		Menu / Home
	Exit		Exit / Cancel / Clear
	←		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Vol-		Vol-
	Smart Colors		Smart / List
	Source		AV / Input / RDS
	P+		CH+ / Page+
	P-		CH- / Page-
	[=]		Text / Goto



