 



 

 

 

 

 

 

 

 

 

 

 

 
 
 

 

 

 

 

 



 



 

 

 

 

 







 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Alarm		Smart / List
	Pre-CH		Back / Return
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	CH-List		Display / Media
	Menu		Menu / Home
	FAV-CH		Fav / Marker / PC
	Tools		Setup / OPT /
	Info		Info / Angle
	Return		Shift + Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung    Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT/MIX		Text / Goto
	SRS		Picture / Format
	P.Size		Zoom / Size
	Dual/I/II		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	SUBT.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung    Ersatzfernbedienung