





































Originalfernbedienung Ersatzfernbedienung

	TV / Input		AV / Input / RDS
	Wide		Picture / Format
	Power		Power
	1		1
	2		2
	3		3
	[]Y]Reveal		Smart / List
	4		4
	5		5
	6		6
	→←		Display / Media
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	-/-- / Subcode		Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	CS		Fav / Marker / PC
	P↔P		Back / Return
	F Subtitle / OK		Subtitle / EQ
	F Subtitle / OK		OK
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu / Index		Menu / Home
	Left / Vol-		Left
	Left / Vol-		Vol-
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / P-		Down
	Down / P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Bass		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random



