






 


 

 
 
 























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Shift + 1
	DVD		Shift + 2
	Scart		Shift + 3
	VGA		Shift + 4
	P.M.		Picture / Format
	S.M.		Sound / Title
	Set Fav		Shift + Fav / Marker / PC
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Fav		Fav / Marker / PC
	Recall / +10		Back / Return
	Stereo / Audio		Audio / Lang I/II
	Vol+		Vol+
	CH+		CH+ / Page+
	Scan		Smart / List
	Mute		Mute / Dimmer
	Vol-		Vol-
	CH-		CH- / Page-
	Subtitle		Subtitle / EQ
	Exit		Exit / Cancel / Clear
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK

 

















Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Source		AV / Input / RDS
	Down		Down
	Sleep		Sleep / Timer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Open / Close		Eject / Surround
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-
	Green / >>		Green / APP / Repeat
	Green / >>		>> / Tune+
	Yellow / I<<		Yellow / YouTube / Repeat
	Yellow / I<<		I<< / Preset-
	Blue / >>I		Blue / Prime Video / Random
	Blue / >>I		>>I / Preset+
	Title / Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Menu / [≡X]		D.Menu / Top
	Angle / [≡◇]		Info / Angle
	Angle / [≡◇]		Zoom / Size
	Repeat / [≡□]		Shift + Stop /
	Repeat / [≡□]		Shift + Green / APP /
	Set Up / [≡i]		Setup / OPT /
	Slow / [≡?]		Shift + Play /
	Goto / [≡⊖]		Shift + Text /
	Card / [≡...]		TV/Radio /

