



Originalfernbedienung	Ersatzfernbedienung
Mode	Power
EPG/OSD	Guide / EPG / -/--
Tv/Musci/Repea	TV/Radio /
PIC	Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Title/Favorite PR	Sound / Title
Menu/Memory	Menu / Home
Setup	Setup / OPT /

Originalfernbedienung	Ersatzfernbedienung
Subtitle	Subtitle / EQ
Zoom/Exit	Exit / Cancel / Clear
Mute	Mute / Dimmer
I<<	I<< / Preset-
I<<	Shift + I<< / Preset-
>>I	Shift + >>I / Preset+
>>I	>>I / Preset+
CH-	CH- / Page-
<<	Shift + << /
<<	<< / Tune-
CH+	CH+ / Page+
>>	Shift + >> /
>>	>> / Tune+
Enter	OK
Angle/Teletext	Text / Goto
Slow/Guide	Shift + Play /
Audio	Audio / Lang I/II



