



 

 





 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDD/Music Collection		Red / Netflix / Search
	DVD		Shift + 2
	Tuner		Shift + 6
	Power Tv		Shift + Power
	TV/AV Tv		Shift + AV / Input / RDS
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



















 





 


 


 



Originalfernbedienung Ersatzfernbedienung

	0		0
	Cancel		Exit / Cancel / Clear
	+10/-/--		Guide / EPG / -/--
	Select >		CH+ / Page+
	< Select		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow Search		<< / Tune-
	Slow Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Menu/Play List		Menu / Home
	Functions		Info / Angle
	Sub Menu		Subtitle / EQ

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Top Menu/Disc Navigator		Smart / List
	One Touch Play		Display / Media
	Start		AV / Input / RDS
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Play Energetic		Shift + 1
	Play Mellow		Shift + Play /
	Play Relaxing		Shift + 3
	Play Emotional		Shift + 4
	HDD Rec		Rec / Rec Mode
	CH Select		Picture / Format
	REG/Favourite		Fav / Marker / PC
	Quick OSD		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Play Mode		Zoom / Size
	FL Display		TV/Radio /
	Sleep		Sleep / Timer
	[I]VS		Shift + TV/Radio / Program
	Setup		Setup / OPT /
	Sound		Sound / Title
	Select		Shift + OK
	Muting		Mute / Dimmer

