



























 







 














 

 


 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV/SAT		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Shift + 0
	π		TV/Radio /
	Menu		Menu / Home
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Vol-		Vol-
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	RCL		Back / Return



