





 

 

 











 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text / Goto
	Back		Back / Return
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Menu		Menu / Home
	APP		Shift + Green / APP /
	List		Smart / List
	i		Info / Angle
	EPG		Guide / EPG / -/-
	ALT		Audio / Lang I/II



