 

 


 


 



 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------------|
|  | Index |  | Play / Slow |
|  | Red / -1 |  | Red / Netflix / Search |
|  | Green / Timer / |  | Green / APP / Repeat |
|  | Yellow / Stop |  | Yellow / YouTube / Repeat |
|  | Blue / Reveal |  | Blue / Prime Video / Random |
|  | [≡]]] |  | Rec / Rec Mode |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Size |  | Zoom / Size |
|  | TV |  | TV/Radio / |
|  | Text |  | Text / Goto |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Tint- |  | Shift + Left |
|  | Tint+ |  | Shift + Right |
|  | 4 |  | 4 |
|  | 5 |  | 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|------------------|
|  | 6 |  | 6 |
|  | Contrast- |  | << / Tune- |
|  | Contrast+ |  | >> / Tune+ |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Brightness- |  | I<< / Preset- |
|  | Brightness+ |  | >>I / Preset+ |
|  | P/C |  | Back / Return |
|  | 0 |  | 0 |
|  | AV |  | AV / Input / RDS |
|  | ←•→ |  | Display / Media |
|  | ** |  | Smart / List |
|  | PIP |  | Picture / Format |
|  | i |  | Info / Angle |
|  | i |  | Menu / Home |
|  | ---- |  | Subtitle / EQ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|------------|---------------|
| | Up / P+ | | Up |
| | Up / P+ | | CH+ / Page+ |
| | Mute | | Mute / Dimmer |
| | Left / Vol- | | Left |
| | Left / Vol- | | Vol- |
| | OK | | OK |
| | Right / Vol+ | | Right |
| | Right / Vol+ | | Vol+ |
| | AUX | + 7 | Shift + 7 |
| | Down / P- | | Down |
| | Down / P- | | CH- / Page- |
| | Power | | Power |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|-----------------------|
|  | < |  | << / Preset- |
|  | > |  | >> / Preset+ |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |
|  | Power |  | Power |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------------|
|  | Red |  | Red / Netflix / Search |
|  | Green/Timer |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | TXT |  | Text / Goto |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | -0 |  | << / Tune- |
|  | 0+ |  | >> / Tune+ |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -* |  | I<< / Preset- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------|
|  | *+ |  | >>I / Preset+ |
|  | P/C |  | Back / Return |
|  | 0 |  | 0 |
|  | PIP |  | Picture / Format |
|  | i |  | Info / Angle |
|  | P+ |  | CH+ / Page+ |
|  | Up |  | Up |
|  | Mute |  | Mute / Dimmer |
|  | Left |  | Left |
|  | Vol- |  | Vol- |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | AUX |  | Shift + 7 |
|  | P- |  | CH- / Page- |
|  | Down |  | Down |
|  | Power |  | Power |

