



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/Radio /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Setup		Setup / OPT /
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--





Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK / List		OK
	OK / List		Smart / List
	Info		Info / Angle
	Recall		Back / Return
	TXT		Text / Goto
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Lang		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

 Yellow / Lang	 Audio / Lang I/II
 Blue	 Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

