





































Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV/STB		AV / Input / RDS
	Mute		Mute / Dimmer
	F.List		Display / Media
	Repeat		Shift + Green / APP / APP /
	Res.		Shift + Picture / Format / Format
	Picture		Picture / Format
	Book		Shift + Smart / List / List
	Next Page		Shift + Display / Media / Media
	R.Skip		I<< / Preset-
	REW		<< / Tune-
	FWD		>> / Tune+
	F.Skip		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	CH/PG+		CH+ / Page+
	CH/PG-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Back		Back / Return
	FAV		Fav / Marker / PC
	SAT List		Smart / List
	Option		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

	TV/Radio		TV/Radio /
	Zoom		Zoom / Size
	F1	+ <b>1</b>	Shift + 1
	Red / Audio		Red / Netflix / Search
	Red / Audio		Audio / Lang I/II
	Green / Subt		Subtitle / EQ
	Yellow / Text		Yellow / YouTube / Repeat
	Green / Subt		Green / APP / Repeat
	Yellow / Text		Text / Goto
	Blue / Sleep		Blue / Prime Video / Random
	Blue / Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0

