
































Originalfernbedienung Ersatzfernbedienung

Bright- Sys		<< / Tune-
Bright+ Mode		>> / Tune+
Update		Smart / List
0/10		0
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
Chan.Down		CH- / Page-
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Menu Up		Up
Mute		Mute / Dimmer
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
Menu		Menu / Home
On/Off		Power
Display		Display / Media



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

Menu Left		Left		
OK Enter		OK		
Menu Right		Right		
Menu Down		Down		
Back		Back / Return		
Volume+		Vol+		
Chan.Up		CH+ / Page+		
Volume-		Vol-		

