




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	P+		Shift + CH+ / Page+

Page+


 

 

 



Originalfernbedienung Ersatzfernbedienung

	P+		>> / Preset+
	P-		Shift + CH- /
	P-		l<< / Preset-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Up		CH+ / Page+
	Down		CH- / Page-
	OK		OK
	Right		Vol+
	Fav		Fav / Marker / PC
	Left		Vol-
	Info		Info / Angle
	Lang / Red		Red / Netflix / Search
	Lang / Red		Audio / Lang I/II
	Pause / Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Pause / Blue		Pause / Step / Freeze
	Sound / Green		Green / APP / Repeat
	Sound / Green		Sound / Title
	Text / Yellow		Yellow / YouTube / Repeat
	Text / Yellow		Text / Goto
	SAT		+  Shift + 0
	SAT		Smart / List
	Recall		Back / Return
	TV / SAT		Display / Media
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

