





























**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+














 


**Originalfernbedienung Ersatzfernbedienung**

	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	DVD Menu		D.Menu / Top
	Title		Sound / Title
	Up		Up
	Enter		OK
	Down		Down
	Right		Right
	Left		Left
	Return		Back / Return
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Marker		Fav / Marker / PC





Originalfernbedienung Ersatzfernbedienung

	Search		Red / Netflix / Search
	Program		Shift + TV/Radio / Program
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Resolution		TV/Radio /
	*		Blue / Prime Video / Random
	Power Tv		Shift + Power
	AV Tv		AV / Input / RDS
	PR/CH+ Tv		CH+ / Page+
	PR/CH- Tv		CH- / Page-
	Vol+ Tv		Vol+
	Vol- Tv		Vol-

Originalfernbedienung Ersatzfernbedienung