
































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Exit / Cancel / Clear
	Auto		Setup / OPT /
	Screen ADJ		Picture / Format
	Menu		Menu / Home
	Up		Up
	Return		Back / Return
	Left		Left
	Vol-		Vol-
	Enter		OK
	Right		Right
	Vol+		Vol+
	Default		Text / Goto
	Down		Down
	Function		TV/Radio /
	Memory Viewer		Info / Angle
	Miracast		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Panasonic APP		Smart / List
	Computer 1		Fav / Marker / PC
	Computer 2		Shift + Fav / Marker / PC
	Video		Shift + 4
	HDMI 1		0
	HDMI 2		Shift + 0
	Digital Link		7
	Mute/1		Mute / Dimmer
	Mute/1		1
	D.Zoom+/2		2
	D.Zoom+/2		CH+ / Page+
	Freeze/3		3
	Freeze/3		Pause / Step / Freeze
	AV Mute/4		AV / Input / RDS
	AV Mute/4		4
	D.Zoom-/5		5
	D.Zoom-/5		CH- / Page-



