




























 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Drive Select		Display / Media
	AV Input Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page+		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page-		CH- / Page-
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Internet		Smart / List
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	Skipe		Shift + Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search/Rewi		<< / Tune-
	Slow/search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/Pause Live		Pause / Step / Freeze
	Play		Play / Slow
	i/Status		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	Pop-Up menu/Direct		D.Menu / Top
	Left		Left
	Up		Up
	OK		OK
	Right		Right
	Function Menu		Menu / Home
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Text		Text / Goto
	STTL		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Prog/Check		Shift + TV/Radio / Program
	Chapter		Zoom / Size
	Time Slip		Picture / Format
	Audio		Audio / Lang I/II
	Input Select		AV / Input / RDS
	DEL		Sleep / Timer
	Manual Skip -10s		Shift + Left
	Manual Skip +60s		Shift + Right

