




















 











 




















 












Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
Info		Info / Angle	
Mute		Mute / Dimmer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
MTS		Display / Media	
C.C		Smart / List	
Return		Back / Return	
Vol+		Vol+	
Vol-		Vol-	
CH+		CH+ / Page+	
CH-		CH- / Page-	
Guide		Guide / EPG / -/--	
Fav		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	
Up		Up	
Left		Left	
Enter		OK	
Right		Right	
Down		Down	
Input		AV / Input / RDS	
Menu		Menu / Home	
Picture		Picture / Format	
Sound		Sound / Title	
Sleep		Sleep / Timer	