


















 







 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Caption		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-		Eject / Surround
	0		0
	PRE-CH		Fav / Marker / PC
	Auto Prog.		TV/Radio /
	FAV.CH		Shift + Fav / Marker / PC






 
 



 





 

 

 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	ADD/Del		D.Menu / Top
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Menu		Menu / Home
	MTS		Display / Media
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return

 







Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	PIP		Text / Goto
	PIP CH-		l<< / Preset-
	PIP CH+		>>l / Preset+
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	P.Size		Zoom / Size
	Still		Shift + Pause / Step / Step /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	>>		>> / Tune+

