 

 
 
 

 


 

 

 

 

 

 

 

 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze
	CH Set		Smart / List
	Page >		CH+ / Page+
	< Page		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Red/Last		Red / Netflix / Search
	Green/TTX		Green / APP / Repeat
	Yellow/PIP		Yellow / YouTube / Repeat
	Blue/Zoom		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back / Return
	EPG		Guide / EPG / -/-
	Info		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	SIG		Display / Media
	FAV		Fav / Marker / PC
	SAT	+ 0	Shift + 0

Originalfernbedienung Ersatzfernbedienung

