
 






Originalfernbedienung Ersatzfernbedienung

	PWR		Power
	Tv/Rad		TV/Radio /
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back / Return
	Mute		Mute / Dimmer
	Red/Opt		Red / Netflix / Search
	Green/AV+		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Yellow/FAV		Yellow / YouTube / Repeat
	Blue/A-Z		Blue / Prime Video / Random
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Exit		Exit / Cancel / Clear
	Page+		CH+ / Page+
	Page-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Slow		Shift + Play /
	List		Smart / List
	A-B		D.Menu / Top
	Mark		Fav / Marker / PC
	Jump		Subtitle / EQ
	PIP		Zoom / Size
	Swap		Setup / OPT /
	Move		Display / Media
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

