

 







 







 

















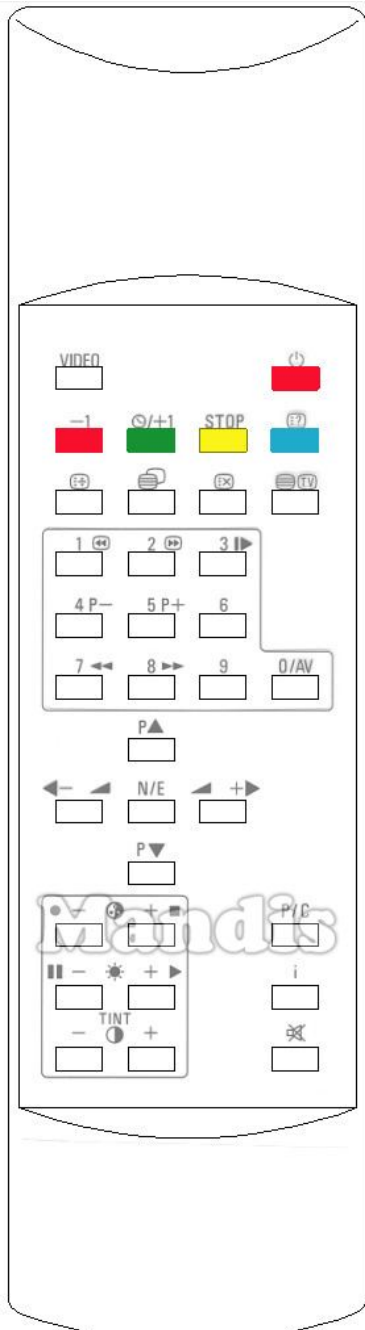 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[=+]		Setup / OPT /
	[/=]		AV / Input / RDS
	[=x]		Picture / Format
	[=]		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0/AV		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	N/E		OK
	Right		Right
	Left		Left
	Up		Up
	Down		Down
	P/C		Back / Return
	i		Info / Angle
	Mute		Mute / Dimmer
	Color-		<< / Tune-
	Color+		>> / Tune+
	Brightness-		I<< / Preset-




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	0/AV		0
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Down		Down
	Up		Up
	N/E		OK
	Right		Right
	Left		Left
	i		Info / Angle
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Tint-		Display / Media
	Tint+		Smart / List
	<<		<< / Tune-
	>>		>> / Tune+
	I>		Zoom / Size
	I<<		I<< / Preset-
	>>I		>>I / Preset+

