



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function		TV/Radio /
	Eject		Eject / Surround
	Sleep		Sleep / Timer
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	7		7
	8		8
	9		9
	Full Screen		Zoom / Size
	0		0
	Repeat		Shift + Green / APP /
	I<<		I<< / Preset-


 





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol +		Vol+
	Mute		Mute / Dimmer
	Tuning+ / CH +		CH+ / Page+
	Vol -		Vol-
	V-Sound		Sound / Title
	Tuning- / CH -		CH- / Page-
	Disc Menu		D.Menu / Top
	Menu		Menu / Home
	Title Menu / PopUp Menu		Shift + Menu /
	Tools		Setup / OPT /
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Tuner Memory		Yellow / YouTube / Repeat
	Blue / Mo/St		Blue / Prime Video / Random
	Smart Hub		Smart / List
	Search		Shift + Red / Netflix /
	S/W Level		Subtitle / EQ
	DSP		Display / Media
	vTuner		Text / Goto

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Source		AV / Input / RDS
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Menu		Menu / Home
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Tuner		Yellow / YouTube / Repeat
	Blue/Mo/St		Blue / Prime Video / Random
	Smart HUB		Smart / List
	Search		Shift + Red / Netflix /

Originalfernbedienung Ersatzfernbedienung

