
















 










 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/RAD / -/-		TV/Radio /
	TV/RAD / -/-		Shift + Guide / EPG / -/-
	0		0
	TV/SAT / Input		AV / Input / RDS
	CH-		CH- / Page-
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Vol+		Vol+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page-		Shift + CH- /
	Down		Down
	Page+		Shift + CH+ /
	Red / Timer		Red / Netflix / Search
	Red / Timer		Zoom / Size
	Green / SIG		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / SUBT		Blue / Prime Video / Random
	Blue / SUBT		Subtitle / EQ





Originalfernbedienung   Ersatzfernbedienung

	Text		Text / Goto
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	Last		Back / Return
	HDD		Shift + 7
	CH Edit		Smart / List
	Audio		Audio / Lang I/II
	i		Info / Angle
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Search		Display / Media

Originalfernbedienung   Ersatzfernbedienung

	Step		Shift + Pause / Step /
	Picture		Picture / Format
	Return		Shift + Back / Return

