



 

 

 

 

 

 

 

 

 






 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Audio / Lang I/II
	[=]..		Subtitle / EQ
	Mute		Mute / Dimmer
	Home		Shift + Menu /
	Smart		Smart / List
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	[G]		Guide / EPG / -/--
	i		Info / Angle
	←		Back / Return
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Source		AV / Input / RDS
	Text		Text / Goto
	<<		<< / Tune-
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix / Netflix /
	YouTube		Shift + Yellow / YouTube / YouTube /
	prime video		Shift + Blue / Prime / Prime
	Google Play		Display / Media

Originalfernbedienung Ersatzfernbedienung

