




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		Smart / List
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Vol+		Vol+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Rec List		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Timer		Shift + Sleep / Timer



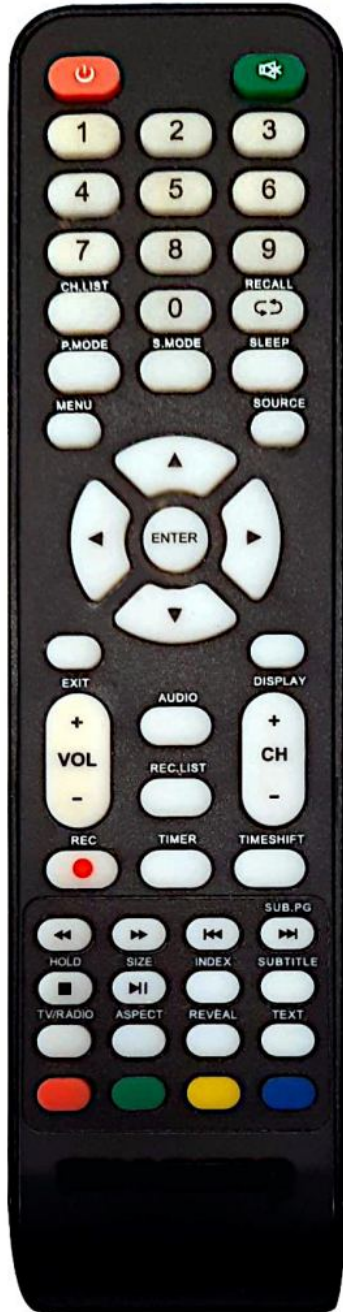

Originalfernbedienung Ersatzfernbedienung

	Timeshift		D.Menu / Top
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I/Sub.Pg		>>I / Preset+
	Stop/Hold		Stop / Hold
	Pause/size		Pause / Step / Freeze
	Play		Play / Slow
	Index		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Tv/Radio		TV/Radio /
	Aspect		Zoom / Size
	Reveal		Info / Angle
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random

