







Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	Info		Info / Angle
	Image		Picture / Format
	Input		AV / Input / RDS
	Auto PC		Smart / List
	Aspect		Setup / OPT /
	No Show		Display / Media
	Menu		Menu / Home
	Up		Up
	Left		Left
	Right		Right
	OK		OK
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	D.Zoom+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung **Ersatzfernbedienung**

	D.Zoom-		CH- / Page-
	Freeze		Pause / Step / Freeze

