 

 



 

 

 





 
 


























 



 

 

 

 








 








Originalfernbedienung Ersatzfernbedienung

|   |                |   |                    |
|---|----------------|---|--------------------|
|    | Power          |    | Power              |
|    | 1              |    | 1                  |
|    | 2              |    | 2                  |
|    | 3              |    | 3                  |
|    | 4              |    | 4                  |
|    | 5              |    | 5                  |
|    | 6              |    | 6                  |
|    | 7              |    | 7                  |
|    | 8              |    | 8                  |
|    | 9              |    | 9                  |
|    | List/Guide     |    | Guide / EPG / -/-- |
|   | List/Guide     |   | Smart / List       |
|  | 0/Quick Access |  | 0                  |
|  | Vol+           |  | Vol+               |
|  | CH+            |  | CH+ / Page+        |
|  | Mute           |  | Mute / Dimmer      |
|  | Vol-           |  | Vol-               |

 








Originalfernbedienung Ersatzfernbedienung

|   |            |   |                                |
|---|------------|---|--------------------------------|
|    | CH-        |    | CH- / Page-                    |
|    | Home       |    | Menu / Home                    |
|    | Source     |    | AV / Input / RDS               |
|    | Up         |    | Up                             |
|    | Left       |    | Left                           |
|    | Wheel Up   |    | >> / Tune+                     |
|    | Right      |    | Right                          |
|    | OK         |    | OK                             |
|    | Wheel Down |    | << / Tune-                     |
|    | Down       |    | Down                           |
|    | *          |    | Setup / OPT /                  |
|   | Back       |   | Back / Return                  |
|  | Red        |  | Red / Netflix / Search         |
|  | Green      |  | Green / APP / Repeat           |
|  | Yellow     |  | Yellow / YouTube / Repeat      |
|  | Blue       |  | Blue / Prime Video / Random    |
|  | Netflix    |  | Shift + Red / Netflix / Search |





**Originalfernbedienung   Ersatzfernbedienung**

| Originalfernbedienung   | Ersatzfernbedienung  | Originalfernbedienung | Ersatzfernbedienung        |
|---|--|-----------------------|----------------------------|
|  prime video |  +  RANDOM     |                       | Shift + Blue / Prime       |
|  Disney+     |  +  REPEAT     |                       | Shift + Green / APP /      |
|  Rakuten TV  |  +  REPEAT A-B |                       | Shift + Yellow / YouTube / |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |
|   |  |                       |                            |

**Originalfernbedienung   Ersatzfernbedienung**

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |
|                       |                     |

