
 

 

 

 

 

 







 





 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	USB		Shift + 8
	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	Display		Display / Media
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Title		Guide / EPG / -/--
	0		0


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Search		Red / Netflix / Search
	Sub / MP3		Subtitle / EQ
	Sub / MP3		Sound / Title
	Left		Left
	Up		Up
	Right		Right
	Enter		OK
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Step		Pause / Step / Freeze
	Stop		Stop / Hold
	Play/Pause		Play / Slow





Originalfernbedienung Ersatzfernbedienung



 

 
 









 















	Vol+		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Angle		Info / Angle
	Mute		Mute / Dimmer
	L/R		AV / Input / RDS
	N/P		Text / Goto
	PBC		Smart / List
	Slow	 + 	Shift + Play /
	V-Mode		D.Menu / Top
	Return		Back / Return
	HD/Res.		Picture / Format
	Program		TV/Radio /
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	USB		Shift + 8
	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	Display		Display / Media
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Title		Sound / Title
	0		0




 



 
 

 

 
 

 



Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Search		Red / Netflix / Search
	Sub/MP3		Subtitle / EQ
	Left		Left
	Up		Up
	Right		Right
	Enter		OK
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Step		Pause / Step / Freeze
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Angle		Info / Angle
	Mute		Mute / Dimmer
	L/R		AV / Input / RDS
	N/P		Text / Goto
	PBC		Smart / List
	Slow	 + 	Shift + Play /
	V-Mode		D.Menu / Top
	Return		Back / Return
	HD/Res.		Picture / Format
	Program		TV/Radio /
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

