
 




Originalfernbedienung Ersatzfernbedienung

	[+]/Auto PC		Auto
	Standby		Power
	Menu		Menu
	Shutter		Source
	Lens Shift	 + 	Shift + Power
	ADJ/Image ADJ.		Eco / Aspect
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Select		Enter
	Zoom +		Vol + / Page +
	Focus +		+ / Play
	Input 1	 + 	Shift + Comp / Video
	Zoom -		Vol - / Page -
	Focus -		- / Stop
	Input 2	 + 	Shift + Mode

Originalfernbedienung Ersatzfernbedienung

	[> <]/Freeze		Freeze / Timer
	Digital Zoom		Blank / Mute
	Input 3		Volt / Focus
	P.Timer	 + 	Shift + Freeze / Timer
	Keystone	 + 	Shift + Up
	Input 4		Mode
	Screen	 + 	Shift + Source
	SEL/Image SEL		Comp / Video
	[i]/Info		Help / Info
	Filter	 + 	Shift + Menu

