



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	Power Tv	 + 	Shift + Power
	1		1
	2		2
	3		3
	PR/CH+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/CH- Tv		CH- / Page-
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+
	Clear		Exit / Cancel / Clear
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	AV/Input		AV / Input / RDS
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	Info/Display		Info / Angle
	Right		Right
	Enter		OK
	Left		Left
	Back		Back / Return
	Down		Down



