



Originalfernbedienung	Ersatzfernbedienung
Power On	Power
Standby	Shift + Power
Auto	Auto
Keystone	Shift + Up
Menu	Menu
Return	Shift + Auto
Default	Shift + - / Stop
Function	Eco / Aspect
Up	Up
Down	Down
Vol-	Vol - / Page -
Left	Left
Right	Right
Vol+	Vol + / Page +
Enter	Enter
Computer1	Comp / Video
Computer2	Shift + Freeze / Timer

Originalfernbedienung	Ersatzfernbedienung
HDMI	Shift + Menu
Memory Viewer	Mode
Miracast	Shift + Mode
Panasonic APP	3D / Invert
ID Set	Volt / Focus
ID All	Help / Info
Video/S-Video	Shift + Comp / Video
Page Up/1	Shift + Vol + / Page +
D.Zoom+/2	+ / Play
Freeze/3	Freeze / Timer
Page Down/4	Shift + Vol - / Page -
D.Zoom-/5	- / Stop
Mute	Blank / Mute
AV Mute	Source

