



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute	 + 	Shift + Blank / Mute
	Auto		Auto
	Menu		Menu
	Return	 + 	Shift + Menu
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		Enter
	V.Keystone+	 + 	Shift + Up
	V.Keystone-	 + 	Shift + Down
	Exit	 + 	Shift + Power
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	Install		Comp / Video
	Quick	 + 	Shift + Auto

**Originalfernbedienung    Ersatzfernbedienung**

	Info		Help / Info
	Blank		Blank / Mute
	Still		Eco / Aspect
	Source		Source
	P.Size		Freeze / Timer
	P.Mode		Mode

