
 

 

 

 
 
 
 






 



 
 




 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	TV		Shift + 1
	Cable/Sat		Shift + 2
	BD/DVD		Shift + 3
	DVR/VCR		Shift + 4
	Audio		Audio / Lang I/II
	AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	-		Shift + Guide / EPG / -/-
	CH RTN		Fav / Marker / PC
	Info		Info / Angle
	Mute		Mute / Dimmer
	Media Share		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Search		Shift + Green / APP / REPEAT
	Home		Menu / Home
	World		Smart / List
	Quick		TV/Radio /
	Guide		Guide / EPG / -/-
	Back		Back / Return






 



 














 






Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	↑	 + 	Shift + Up
	Up		Up
	↓	 + 	Shift + Down
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	<<		<< / Tune-
	<<	 + 	Shift + << /
	Play		Play / Slow
	>>		>> / Tune+
	>>	 + 	Shift + >> /
	I<<		I<< / Preset-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Netflix	 + 	Shift + Red / Netflix /
	eManual		Zoom / Size
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pic Size	 + 	Shift + Zoom /
	Pic Mode		Picture / Format
	Setup		Setup / OPT /
	MTS	 + 	Shift + Subtitle / EQ
	CC		Subtitle / EQ

