

 

 




Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Power		Power
	DVD Menu		D.Menu / Top
	Source		AV / Input / RDS
	LCD On/Off		Shift + Power
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	CH+		CH+ / Page+
	Up		Up
	CH-		CH- / Page-
	Down		Down
	Left		Left
	<<		<< / Tune-
	>>		>> / Tune+
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Play		Play / Slow
	OK		OK
	Radio(Tv)		TV/Radio /
	List		Smart / List
	FAV		Fav / Marker / PC
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Teletext		Text / Goto
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - SAT	0
	Back	RETURN	Back / Return
	Goto	SHIFT + GOTO	Shift + Text /
	Red/[<>]	NETFLIX	Red / Netflix / Search
	Green/Angle	APP	Green / APP / Repeat
	Yellow/Prog	YouTube	Yellow / YouTube / Repeat
	Blue/Repeat	Prime Video	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

