







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	Band		Smart / List
	Band		Shift + 6
	DVD		Shift + 2
	Aux		Shift + 7
	USB		Shift + 8
	1		1
	2		2
	3		3
	Virtual		D.Menu / Top
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung






 







 



	0		0
	XTS Pro		Picture / Format
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Sound		Sound / Title
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Setup		Setup / OPT /
	Up / Preset +		Up
	Up / Preset +		Shift + >> / Preset+
	Display		Display / Media
	Left / Tun -		Left
	Left / Tun -		Shift + << /
	Enter		OK
	Right / Tun +		Right
	Right / Tun +		Shift + >> /

Tune+

 








Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Down / Preset -		Down
	Down / Preset -		Shift + I<< / Preset-
	Title		Shift + Sound / Title
	<< Scan -		<< / Tune-
	>> Scan +		>> / Tune+
	Play		Play / Slow
	Volume +		Vol+
	I<< / Skip-		I<< / Preset-
	>>I / Skip+		>>I / Preset+
	Pause / Step		Pause / Step / Freeze
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Volume -		Vol-
	Prog / Memo.		TV/Radio /
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	RDS / Resol.		CH+ / Page+
	PTY / HDMI		CH- / Page-
	Dimmer		Shift + Mute / Dimmer
	Tv Channel+		Shift + CH+ /
	Tv Vol+		Shift + Vol+
	Tv Mute		Shift + Smart / List
	Power Tv		Shift + Power
	Tv Channel-		Shift + CH- /
	Tv Vol-		Shift + Vol-
	Tv Input		Shift + AV / Input / RDS

