





 





 











 





 











 





 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Netflix		Red / Netflix / Search
	You Tube		Yellow / YouTube / Repeat
	Input		AV / Input / RDS
	Google Play		Green / APP / Repeat
	Colors		Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	Smart		Smart / List
	123		1
	Back		Back / Return
	0		0
	Guide		Guide / EPG / -/-
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	TV		TV/Radio /
	P+		CH+ / Page+
	P-		CH- / Page-
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	PVR		Setup / OPT /

