


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	[=]		Text / Goto
	I-II		Audio / Lang I/II
	[...]		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Up		Up
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Option		Shift + Setup / OPT / Tools
	[i+]		Info / Angle
	Vol+		Vol+
	Stop		Stop / Hold
	Page+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Page-		CH- / Page-
	1		1
	2		2
	3		3
	FAV		Fav / Marker / PC
	4		4
	5		5
	6		6
	J/Slideshow		TV/Radio /
	7		7





Originalfernbedienung Ersatzfernbedienung

8	8	USB 8	8
9	9	BLUETOOTH 9	9
ROTATE	Rotate	MEDIA DISPLAY	Display / Media
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
0	0	HDMI - BAT 0	0
[<>]	[<>]	FORMAT PICTURE	Picture / Format
ZOOM	Zoom	SIZE ZOOM	Zoom / Size

Originalfernbedienung Ersatzfernbedienung

