




 

 
 




 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VGA		Red / Netflix / Search
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	Brightness+		>> / Tune+
	Brightness-		<< / Tune-
	Contrast+		>>I / Preset+
	Contrast-		I<< / Preset-
	Zoom On/Off		Zoom / Size
	Zoom In		Sleep / Timer
	Zoom Out		TV/Radio /
	Menu		Menu / Home
	OK		OK
	Up		Up
	Down		Down
	Left		Left



Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH/PR+		CH+ / Page+
	CH/PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV Mute		AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	[<>]  Picture / Format

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

