
 
 

 

 

 

 





 



 

 
 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	DTV		Smart / List
	Radio		TV/Radio /
	USB		Shift + 8
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	Info		Info / Angle
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK



