 


 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		AV / Input / RDS
	DVD		Shift + 2
	Tv Audio		Audio / Lang I/II
	Blu-ray		Shift + Blue / Prime
	AUX		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Green / APP /
	8K		Shift + Yellow / YouTube /
	Phono		Guide / EPG / -/--
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Internet Radio		Shift + 0
	Internet Radio		TV/Radio /
	Quick Select 1		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Quick Select 2		Picture / Format
	Quick Select 3		D.Menu / Top
	Quick Select 4		Zoom / Size
	CH/Page Up		CH+ / Page+
	CH/Page Down		CH- / Page-
	Eco		Smart / List
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Back		Back / Return
	Setup		Setup / OPT /
	Up		Up
	Down		Down
	Left		Left
	Right		Right




Originalfernbedienung Ersatzfernbedienung

	<</Tune-		<< / Preset-
	Play		Play / Slow
	>> /Tune+		>> / Preset+
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	Green/Movie		Green / APP / Repeat
	Red/Music		Red / Netflix / Search
	Blue/Game		Blue / Prime Video / Random
	Yellow/Pure		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6







 
 





 









 

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Sleep		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		AV / Input / RDS
	DVD		Shift + 2
	Tv Audio		Audio / Lang I/II
	Blu-ray		Shift + Blue / Prime
	AUX		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Blue / Prime Video / Random
	8K		Yellow / YouTube / Repeat
	Phono		Guide / EPG / -/--
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Internet Radio		Shift + 0
	Internet Radio		TV/Radio /
	Quick Select 1		Sound / Title































Originalfernbedienung Ersatzfernbedienung

	Quick Select 2		Picture / Format
	Quick Select 3		D.Menu / Top
	Quick Select 4		Zoom / Size
	CH/Page Up		CH+ / Page+
	CH/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	>>I/Tune+		>>I / Preset+
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung






	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		AV / Input / RDS
	DVD		Shift + 2
	Tv Audio		Audio / Lang I/II
	Blu-ray		Blue / Prime Video / Random
	AUX		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Green / APP / Repeat
	8K		Yellow / YouTube / Repeat
	Phono		Guide / EPG / -/--
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Internet Radio		Shift + 0
	Internet Radio		TV/Radio /
	Quick Select 1		Sound / Title















 





 









Originalfernbedienung Ersatzfernbedienung

	Quick Select 2		Picture / Format
	Quick Select 3		D.Menu / Top
	Quick Select 4		Zoom / Size
	CH/Page Up		CH+ / Page+
	CH/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	>>I/Tune+		>>I / Preset+
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

